


MAIN TRAVELERS

H-16 JIB TRAVELER CONTROLS

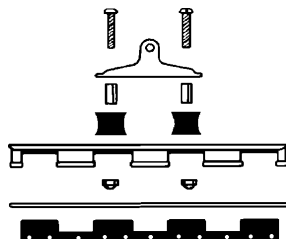

TRACKER REPLACEMENT PARTS — 1993 & EARLIER H-14/16/17

The standard replacement parts for all 1993 and earlier H-14/16/17s. Includes 2-3 rivets where required.

- 07-1050 Tracker Car Assembly Complete \$79.95
- 07-1051 Deck Plate \$8.40
- 07-1059 Sheave Kit (1 each: sheave, spacer, screw, nylock nut) \$8.00
- 07-1054 Hinge Upright \$17.40
- 07-1055 Hinge Pin \$3.00
- 07-1060 Bottom Roller \$49.50
- 19-5024 Countersunk Rivet CCC 6-6— each \$.74

TIP The last digits of the number inscribed on the transoms of a Hobie® indicate the month and year of manufacture.

TRAVELER CAR — 1994 & LATER H-14/16/17

The tracker car on 1994 and later H-14/16/17s offers superior strength and free movement. It has higher load axles with thick brass wheels for ease of traveler movement. A new, deeper traveler track that is riveted on is required to retrofit boats made in 1993 or earlier. Includes 2-3 rivets where required.

- 07-0111 Heavy Duty Tracker Car Assembly Complete H-14/16/17 \$82.95
- 07-0112 Roller Unit Only \$58.80
- 50-50252021 Main Traveler Track with Deep Profile H-17; you cut to fit H-14/16 \$116.00
- 19-5021 Rivet for Traveler Track Installation CCC 6-4— each \$.74



TIP To properly maintain hardware, rinse frequently with fresh water and lubricate moving surfaces with One Drop Ball Bearing Conditioner (#40-0410) or Sailkote (#40-0401).



A. HARKEN TRAVELER CAR

Harken ball bearing traveler with fixed sheaves and eye strap will fit most late model Nacra catamarans. #28-0214 and #28-0441 have SWL of 1250 lbs. Replacement bearings come in packages of 21, #28-0214 and #28-0441 require 64 balls. A car loader is needed to load bearings on pre-2003 cars!

- A. 28-0214 Extra Hi-Load Traveler Car Pre-2003 \$190.00
- 28-0441 Traveler Car with Swivel Cam H-17S/20/21 (non-captive ball bearings; pre-2003) \$288.00
- 28-0177 Replacement Bearings (21) \$10.50
- 28-HS88 Car Loader \$10.00
- 28-0173 End Stop— Pair \$6.60
- 28-HS878 Trav. Car End Plates (pair) \$16.00
- 28-2720 Repl. Main Traveler Track 99" (H-17/20, Nacras & Others) Post-2002 \$119.95
- 28-2736 New (post-2002) Traveler Car with Captive Bearings \$182.80 (New car works with new track only)
- 19-1622 Screw Stainless #8 x 1-1/2" \$.32

H-14/16/17 TRACKER TRAVELER KIT

Includes #07-1050 tracker car, swivel cam, mounting plate, line and fasteners. Standard on pre-1994 H-14/16/17.

- 07-1040 \$150.00



PRINDLE® TRAVELER

Standard equipment on new Prindle® cats. Four durable plastic rollers ride smoothly on Prindle® traveler tracks. Two cylindrical sheaves reduce traveler control line friction.

- 56-3010 \$80.00

JIB TRAVELER CONTROL KITS FOR H-16

A jib traveler system allows remote adjustment of the jib cars. This dramatically increases downwind speed and may help avoid a pitchpole caused by your crew moving leeward to make an adjustment by hand. Each of the following kits is complete with cleats, turning blocks, line, shock cord, fasteners and instructions. Photos show recommended cleat locations, but cleats can be positioned to meet your individual needs.



H-16 JIB SHEET & TRAVELER CONTROL UPGRADE

Designed as an upgrade for H-16 with swivel cam cleats jib sheet system. Replace old Hobie® traveler cars with new Ronstan® traveler cars and the existing cam cleats become part of the jib traveler control system. A detailed photo of Ronstan Jib Traveler Car #01-3130 is on page 23. Kit also includes Harken cheek blocks, jib traveler control lines, shock cord to self-return jib cars to center, fasteners and instructions.

- 01-3120 Complete Kit (less swivel 360 cleats & bases) \$195.00
- 25-3010 Swivel 360 Cleat— each (if needed) \$57.00
- 07-1162 Base with Fasteners for Swivel 360 cleat— each \$9.25



H-16 FIXED-CAM TRAVELER CONTROL

Low profile, lightweight and rugged with plenty of range. May be the best value remote positioning traveler control kit! Molded urethane mounting bases fit crossbar and accommodate Ronstan C-cleats with Fast Track fairleads which are very sturdy and provide a wide range of cleating angles. Includes Ronstan C-cleats with fairlead, mounting base, trim line, shock cord return, fasteners and instructions. Tren Tec jib traveler cars shown in photo are not included (see page 23).

- 01-3112 \$130.00



Photo: John Healey